 













VIRTUOSO
MODERN HOME SYSTEMS











Pergola Electrica

      Instructioni de instalare

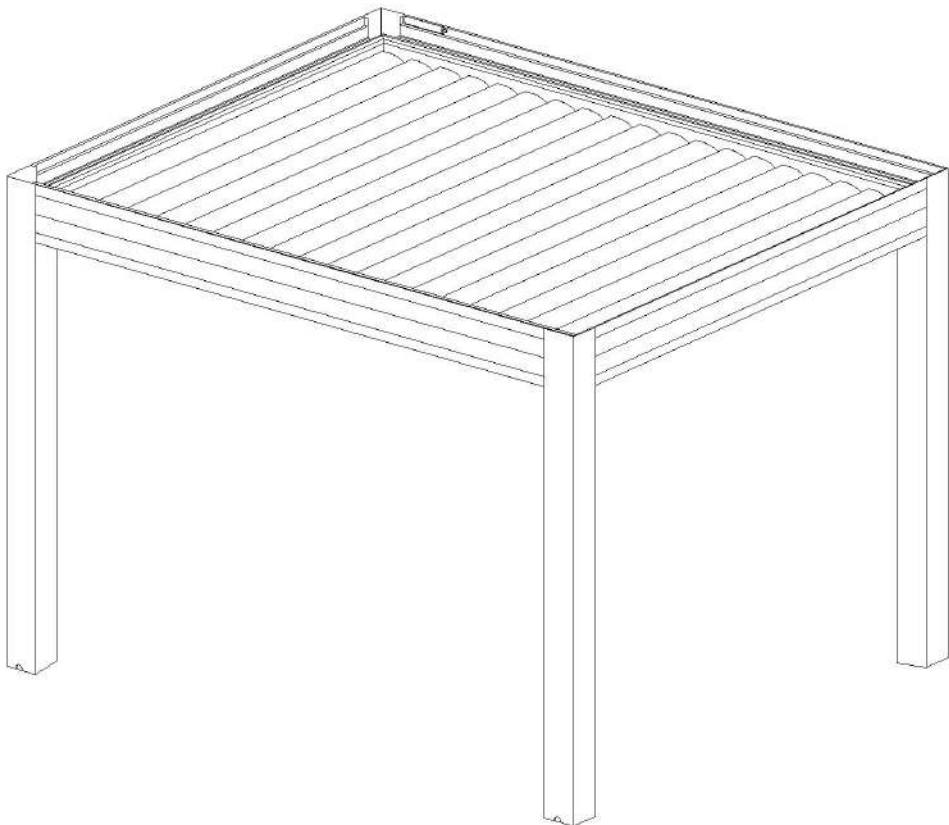

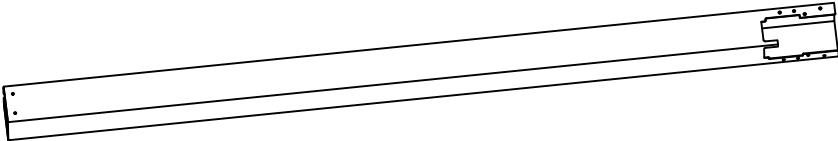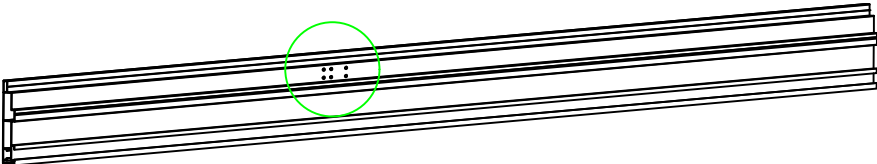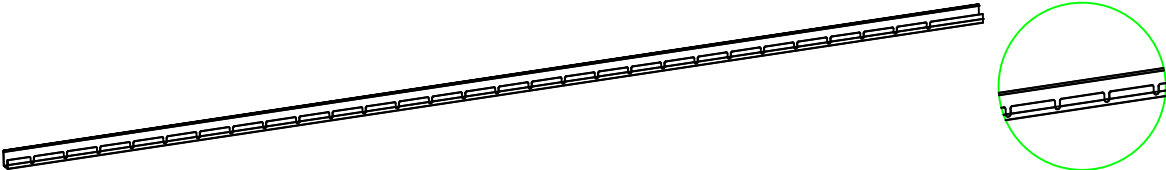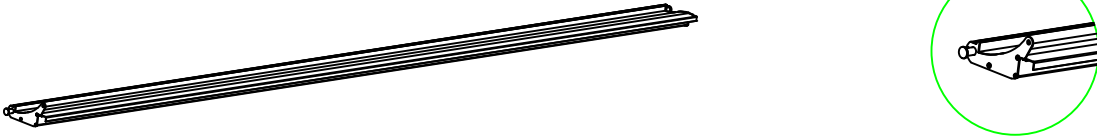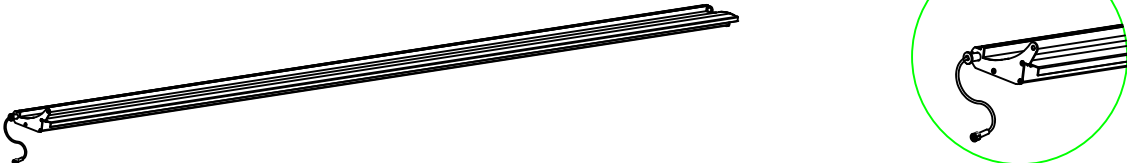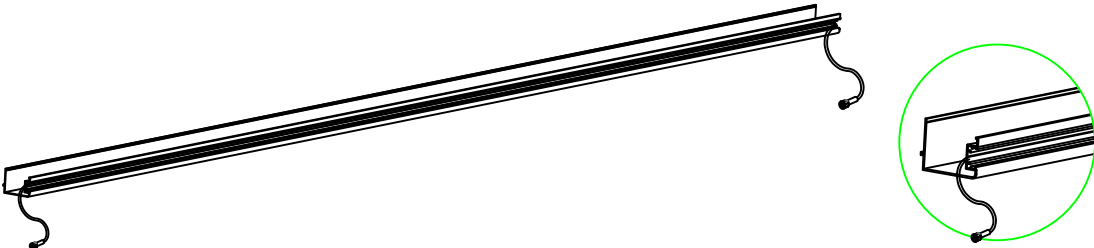REF	POZA	CANT
A		4 BUC
B		3 BUC
B1		1 BUC
C		2 BUC
D		22 BUC
D1		6 BUC
E		4 BUC

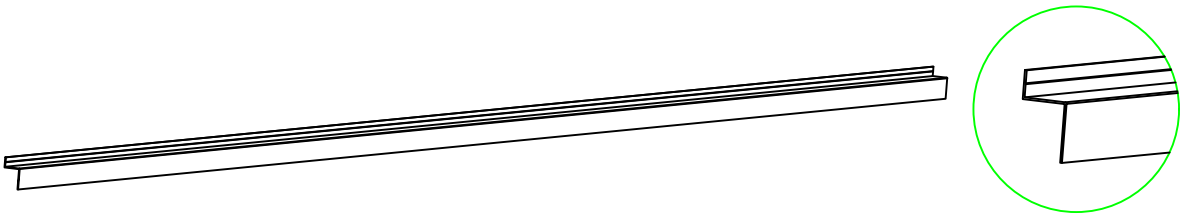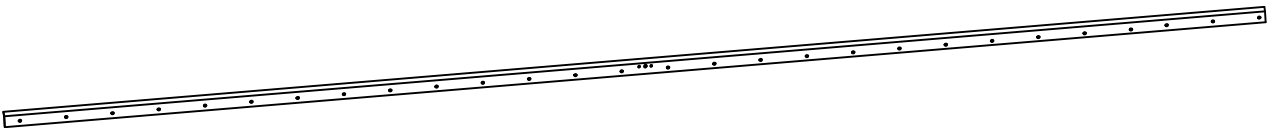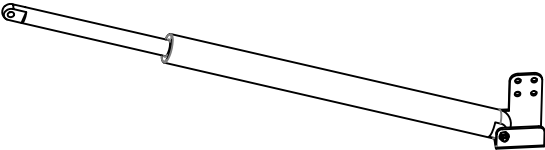   REF	POZA	CANT
F		2 BUC
G		1 BUC
H		1 BUC

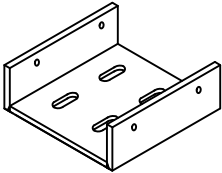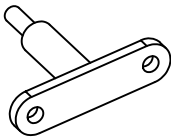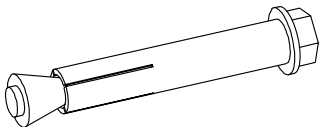          REF	POZA	CANT	REF	POZA	CANT
I		4 BUC	X	 M8*20Large flat head hexagon with spring pad+non slip nut	2 BUC
J		4 BUC	Y		2 BUC
M	 M8*25	32 BUC	K		8 BUC
P	 M10x60 expansion screw	16 BUC	L		16 BUC
Q		2 BUC			
R	 M8x20 with non ship nut +M8x16x2 nylon washer x2 pieces	26 BUC			
S	 M6*30沉头螺栓	16 BUC			
V	 M4.2x32 cross pan head self drilling screw	64 BUC			
W	 M6*25沉头螺栓	4 BUC			

Avertisment

În sezonul de zăpadă sau în caz de prognoză de ninsoare, deschideți obloanele în poziție verticală pentru a evita orice deteriorare a pergolei.

De ce aveți nevoie?



Manusi



Cuțit



Ciocan



Casca de protecție



Ruleta



 
 
Bormasina

 
 
 


 
 
 
 
Scara

 
 
1

 
 
 
de 4 ori

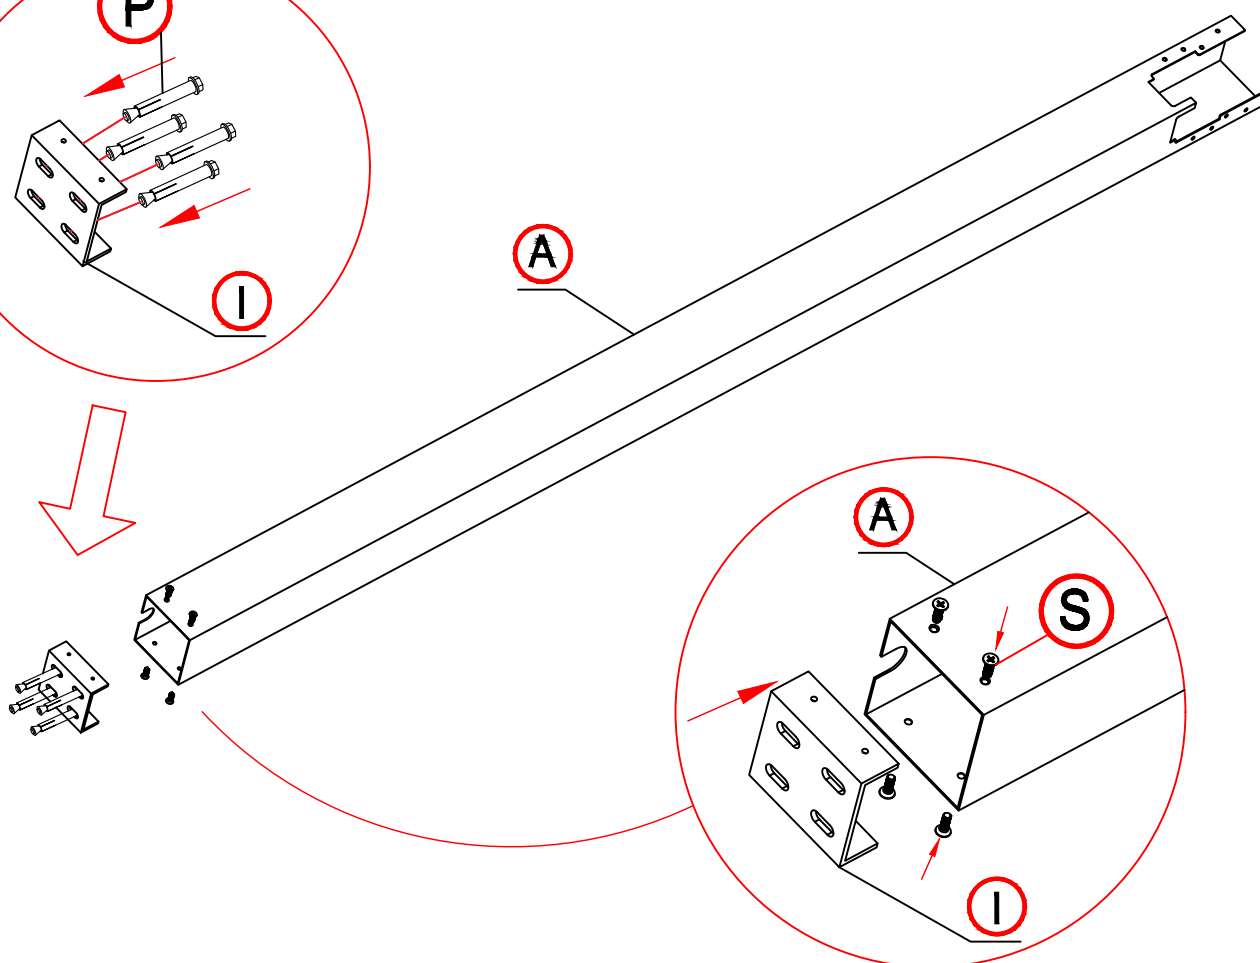 
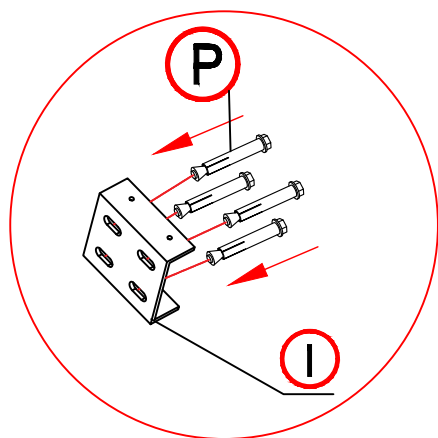 


 
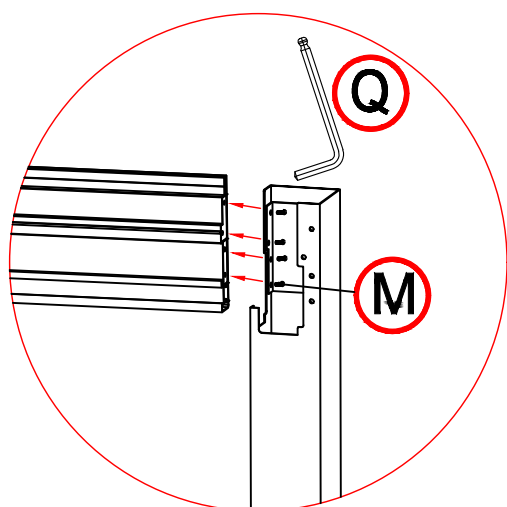 
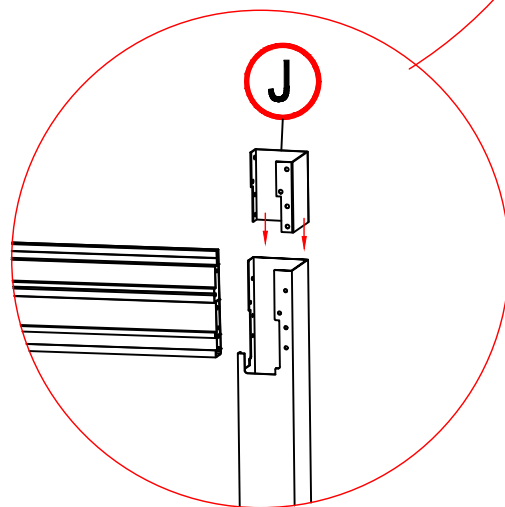 
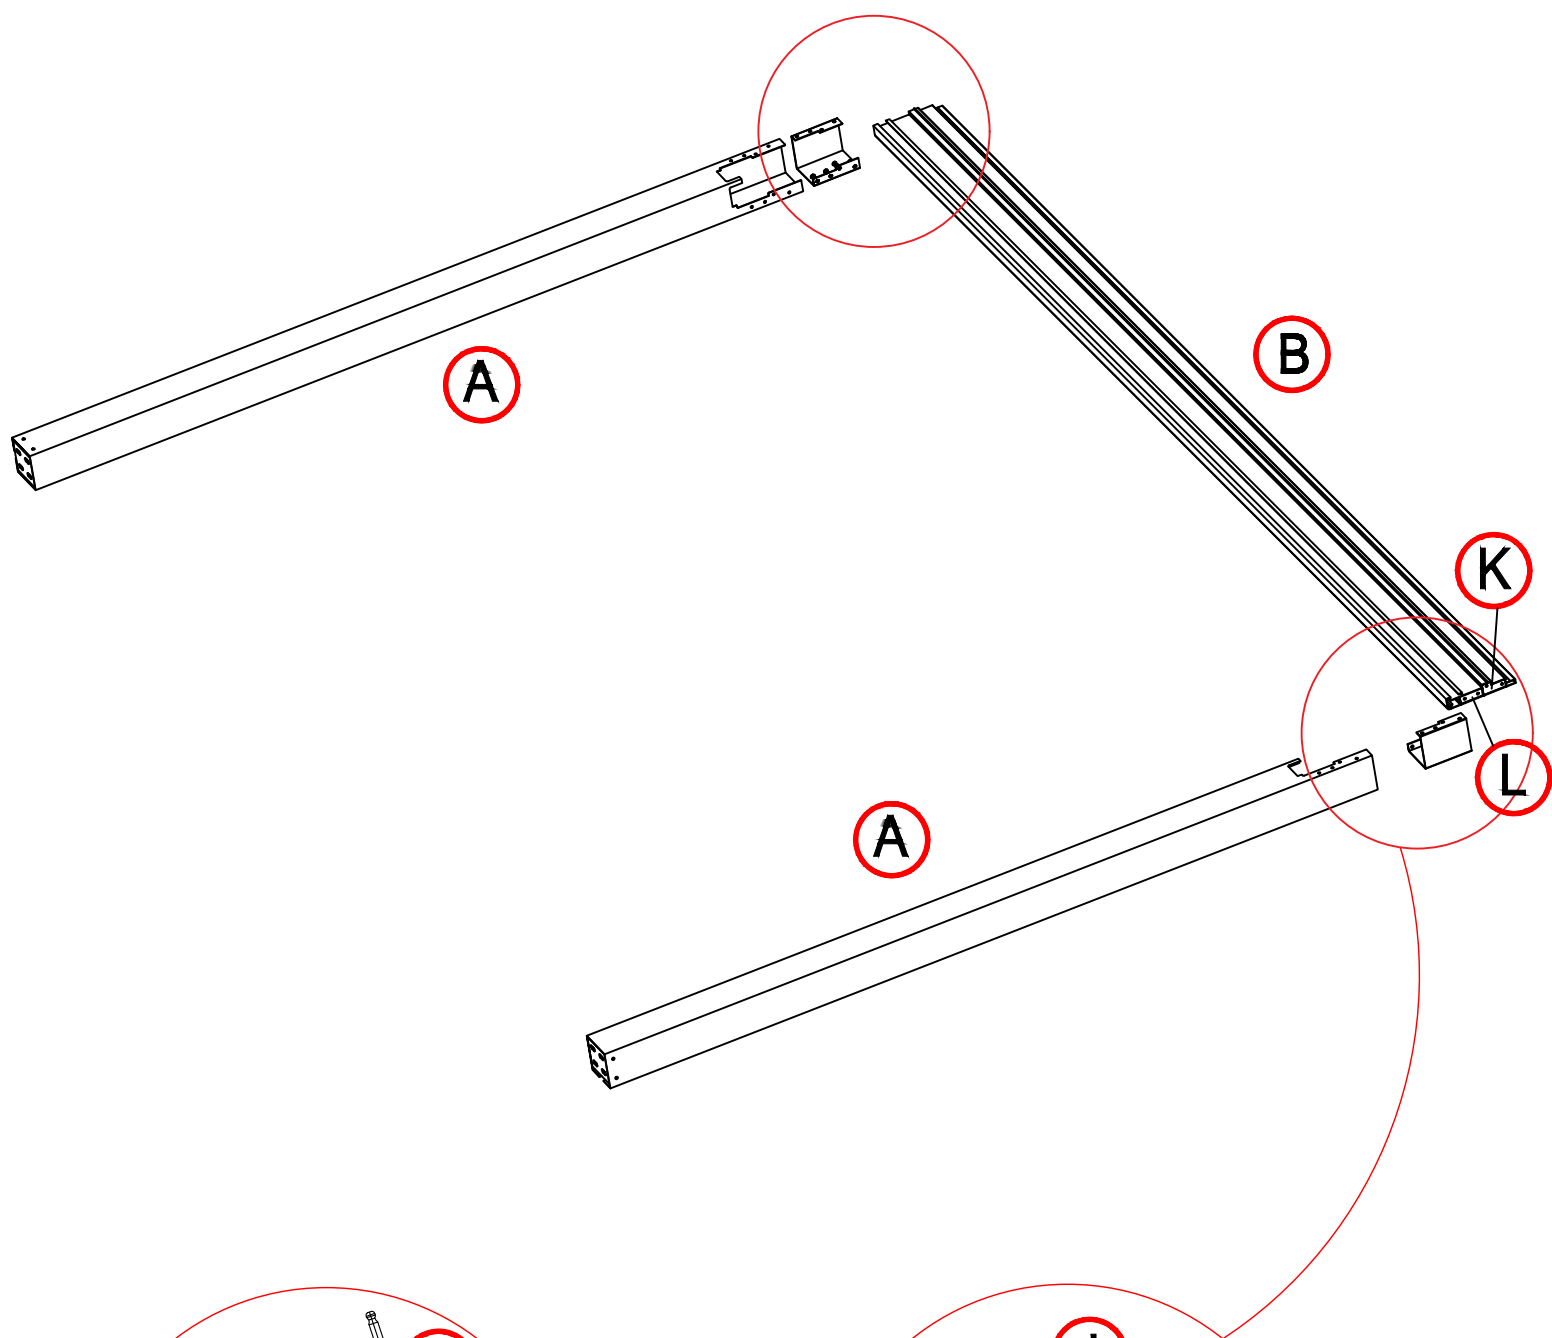 


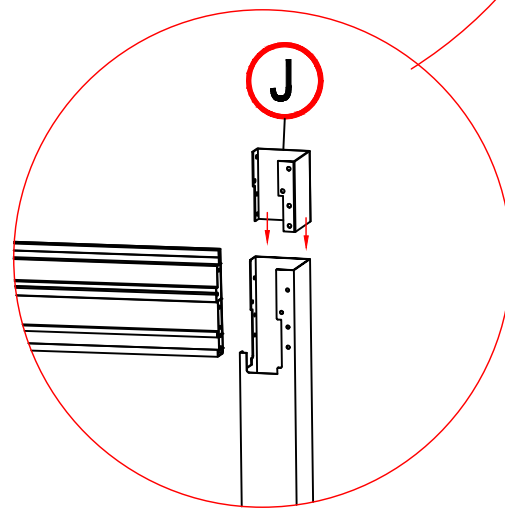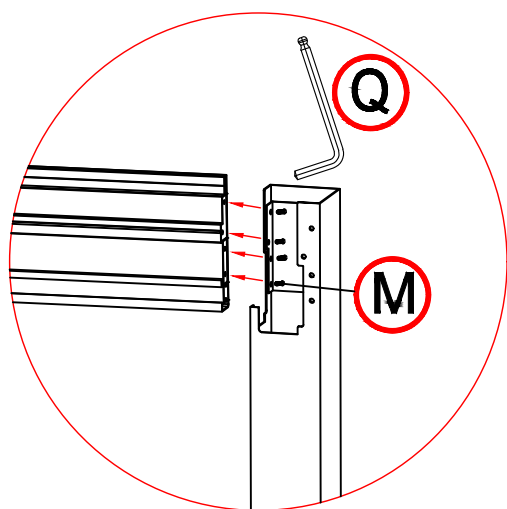 
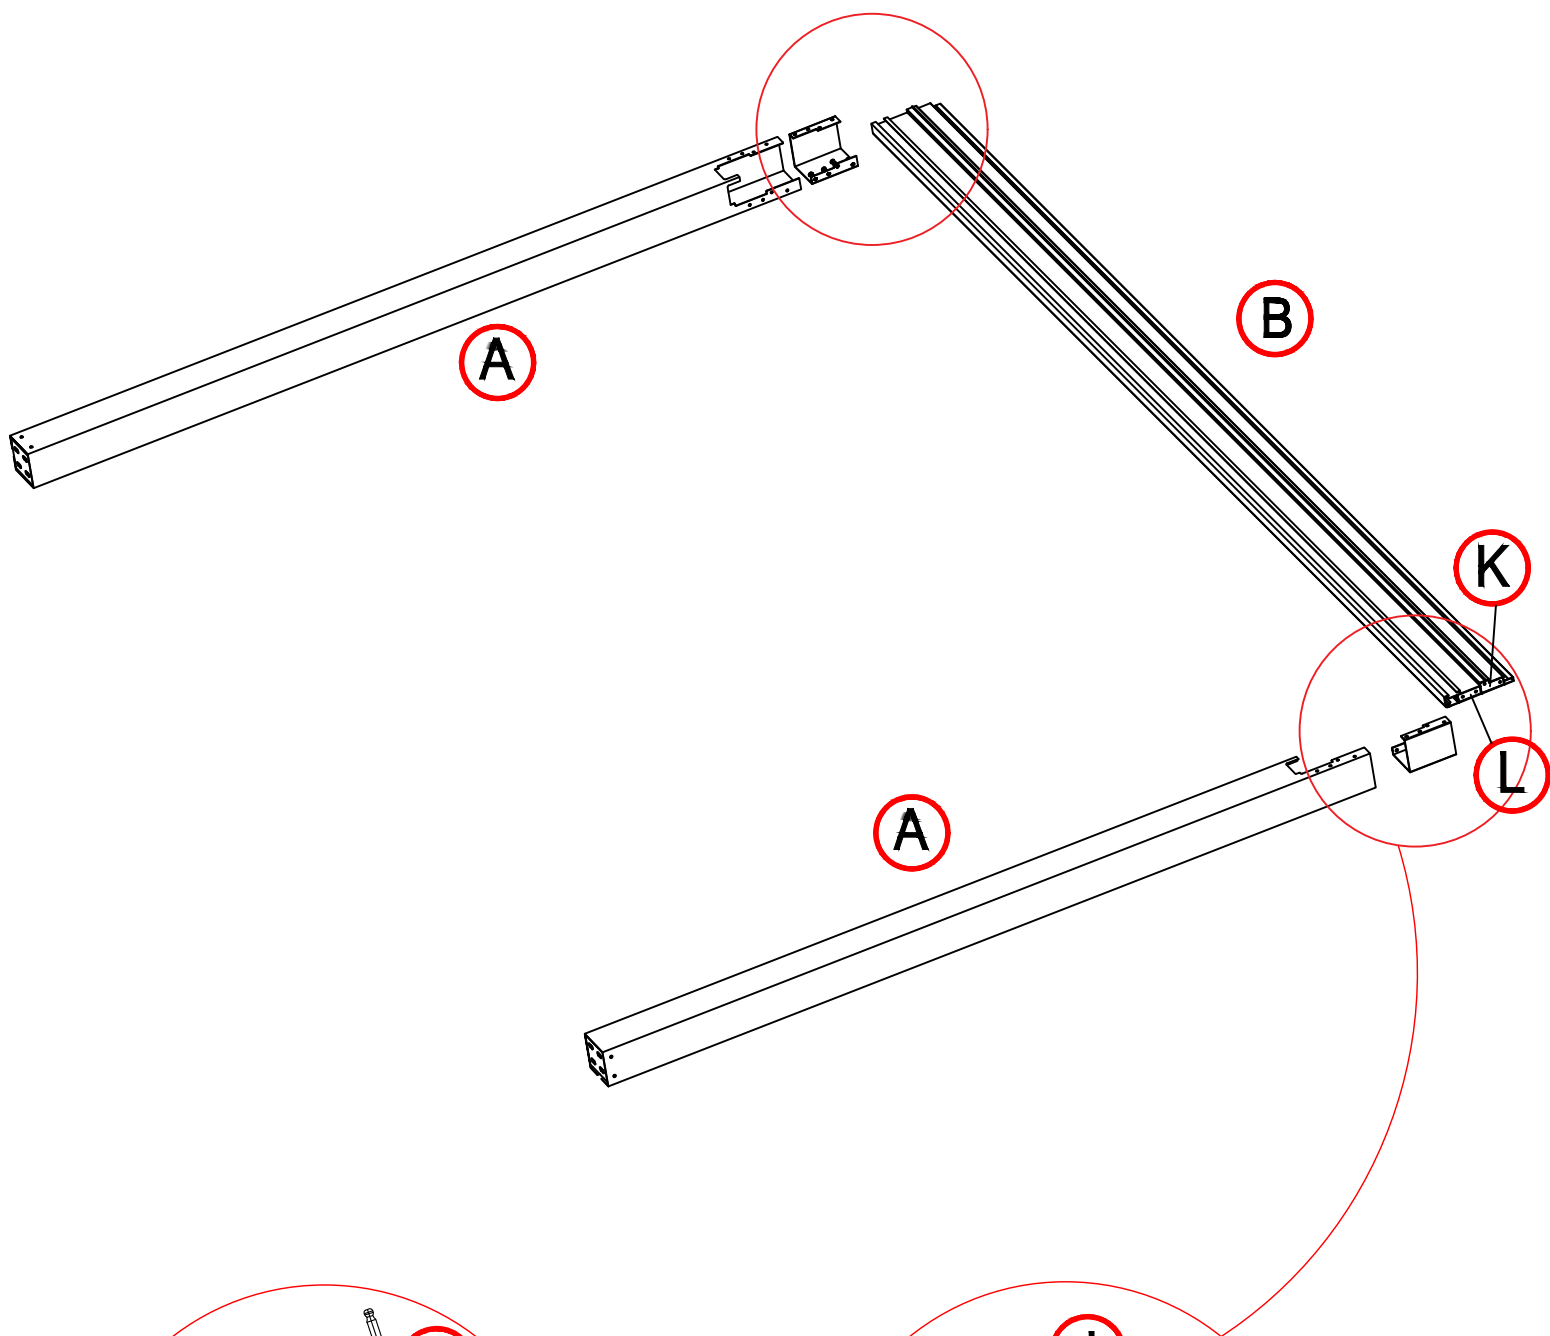 


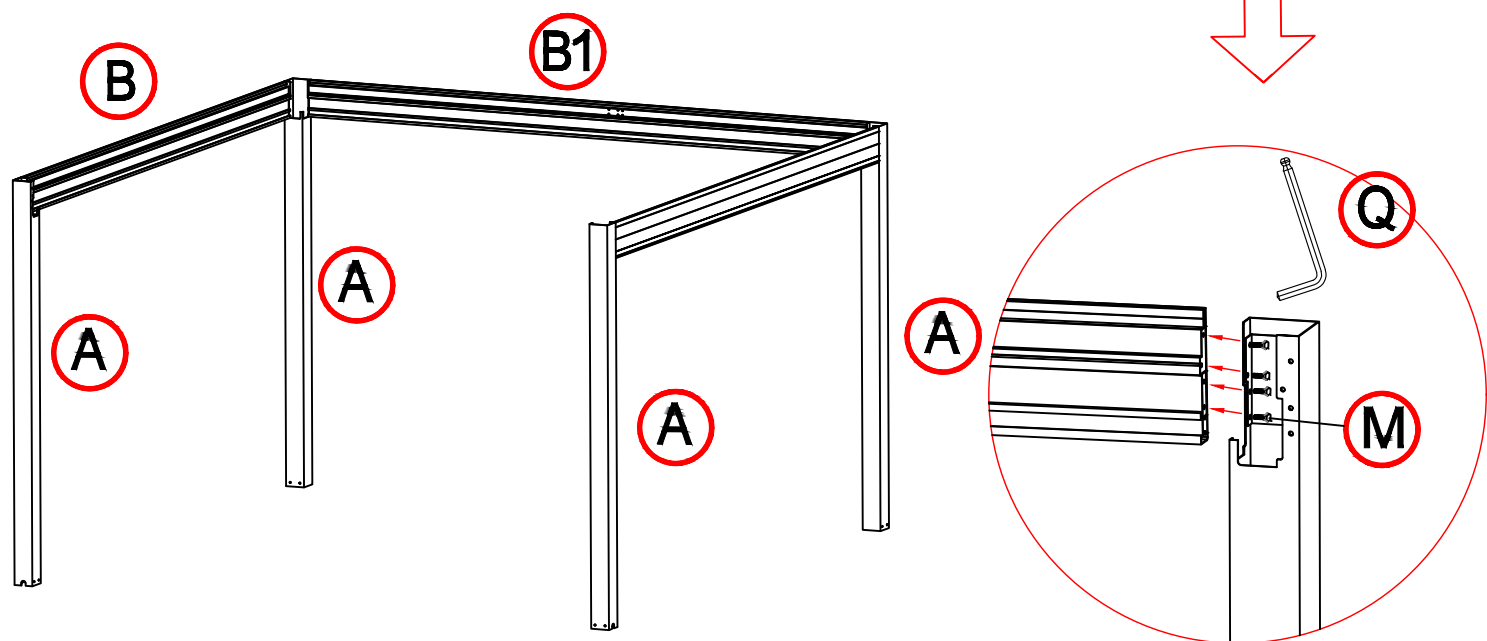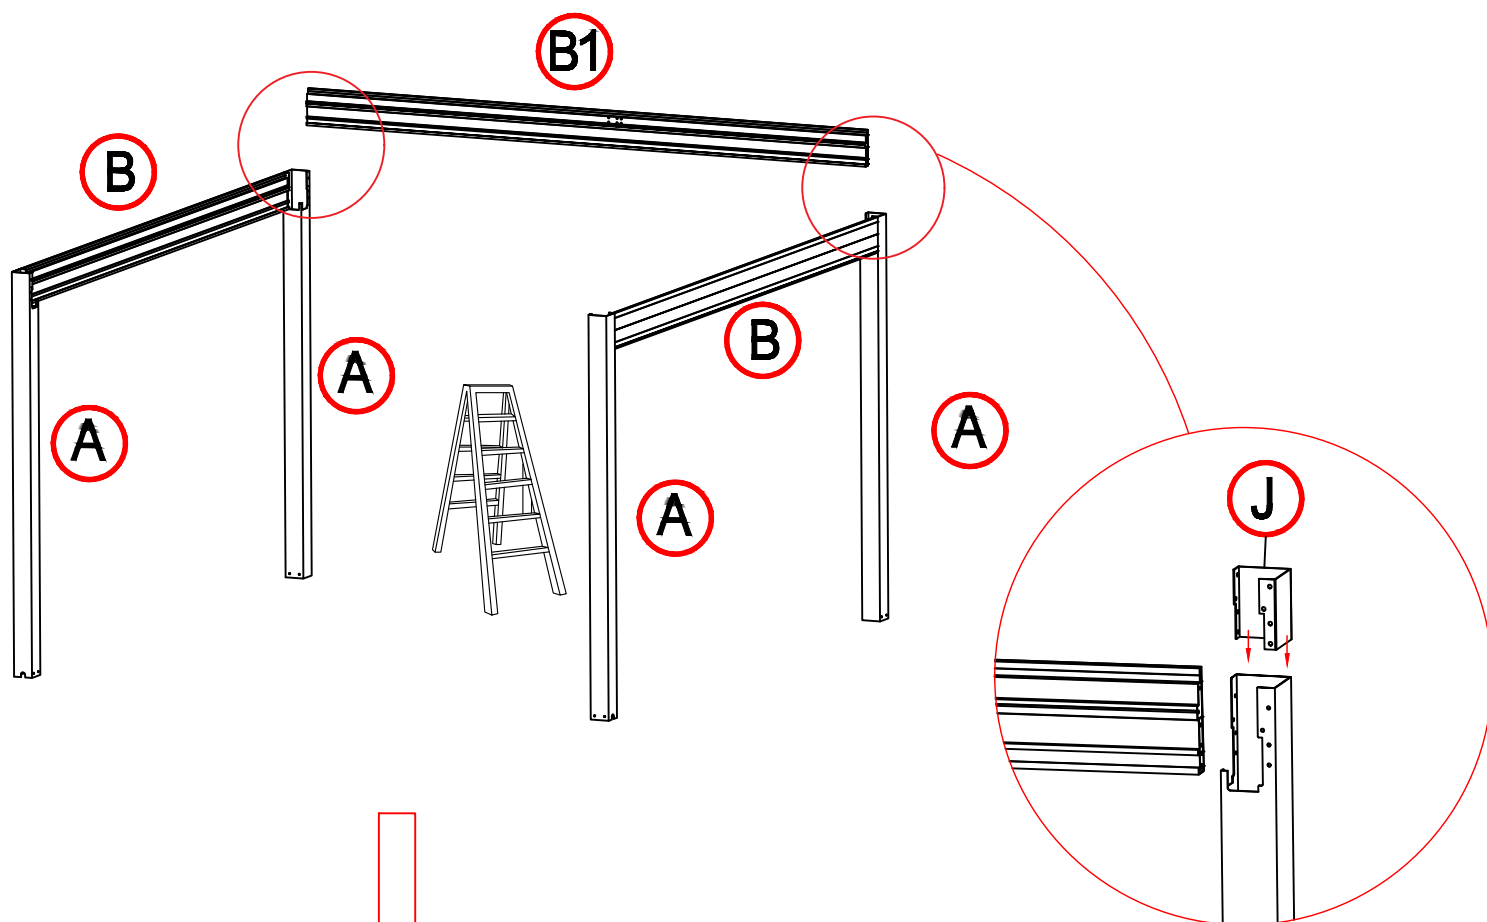 


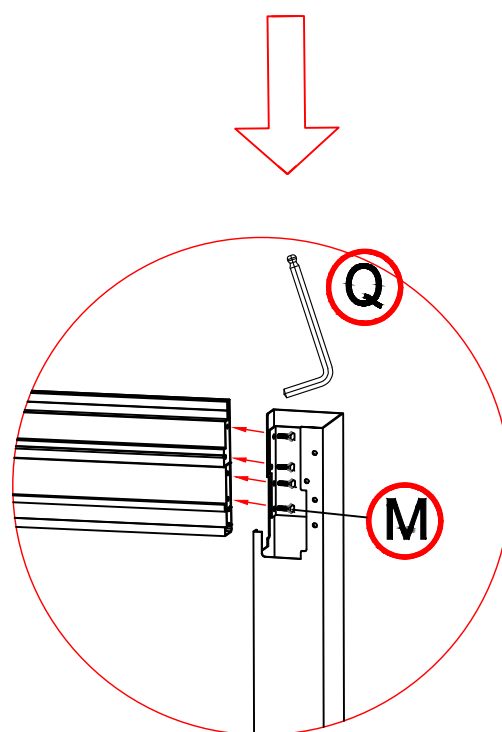 
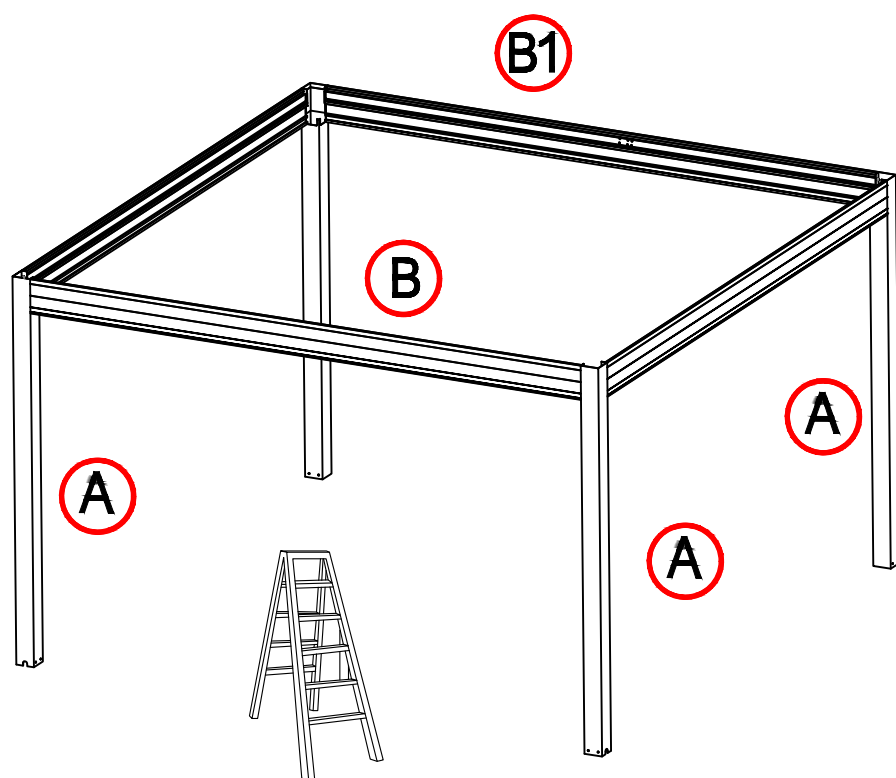 
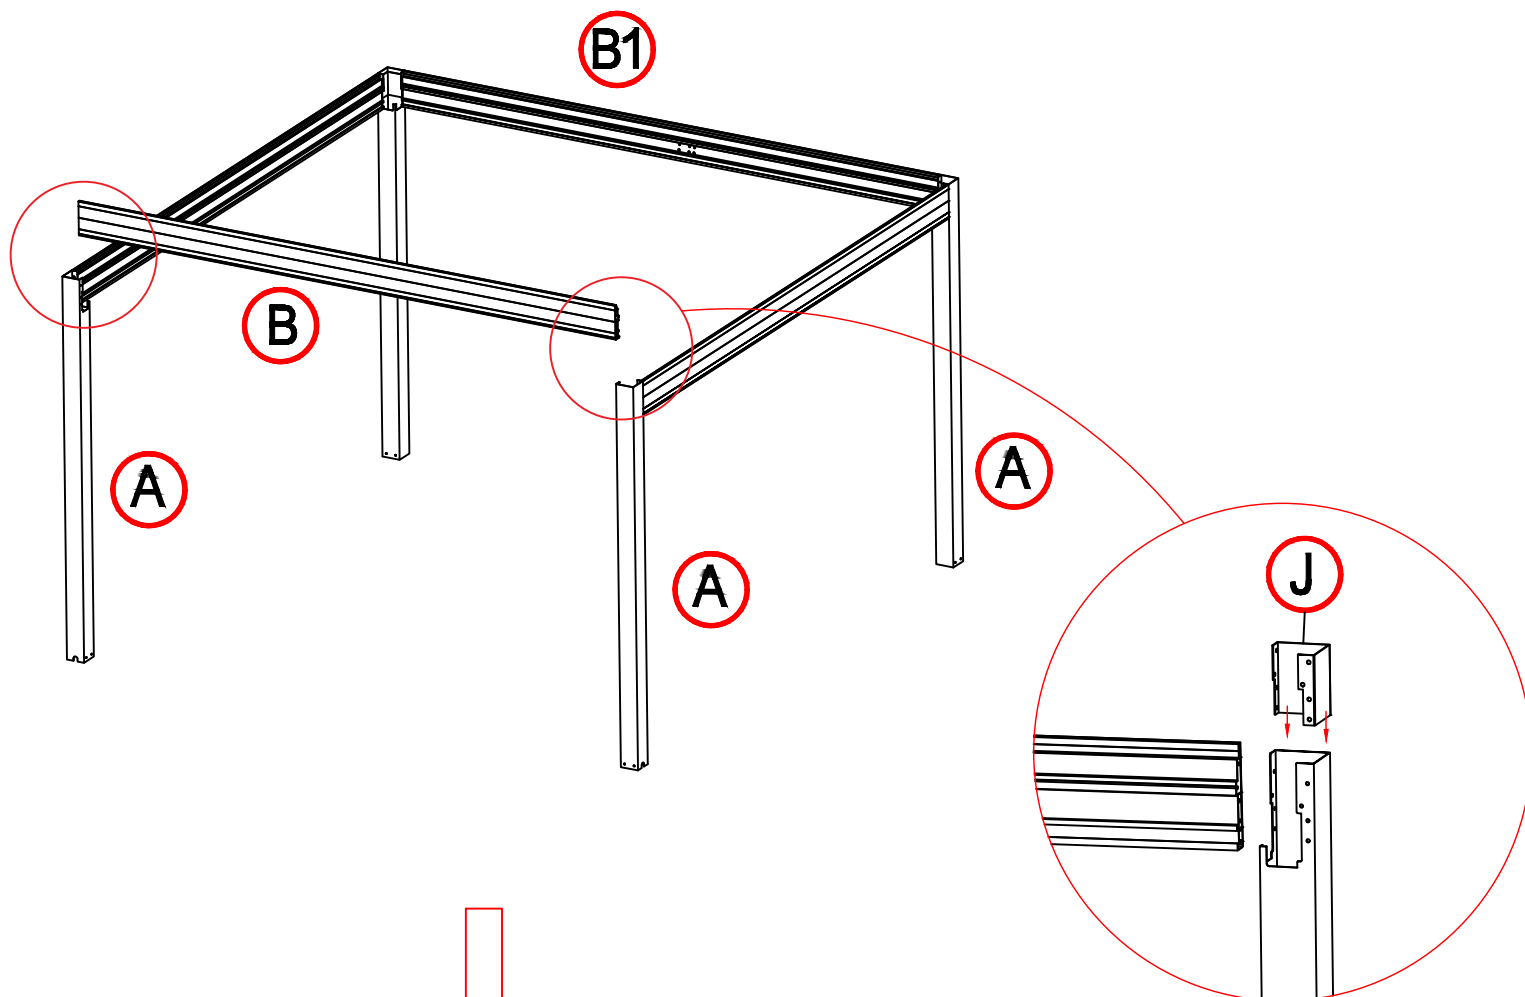 


 
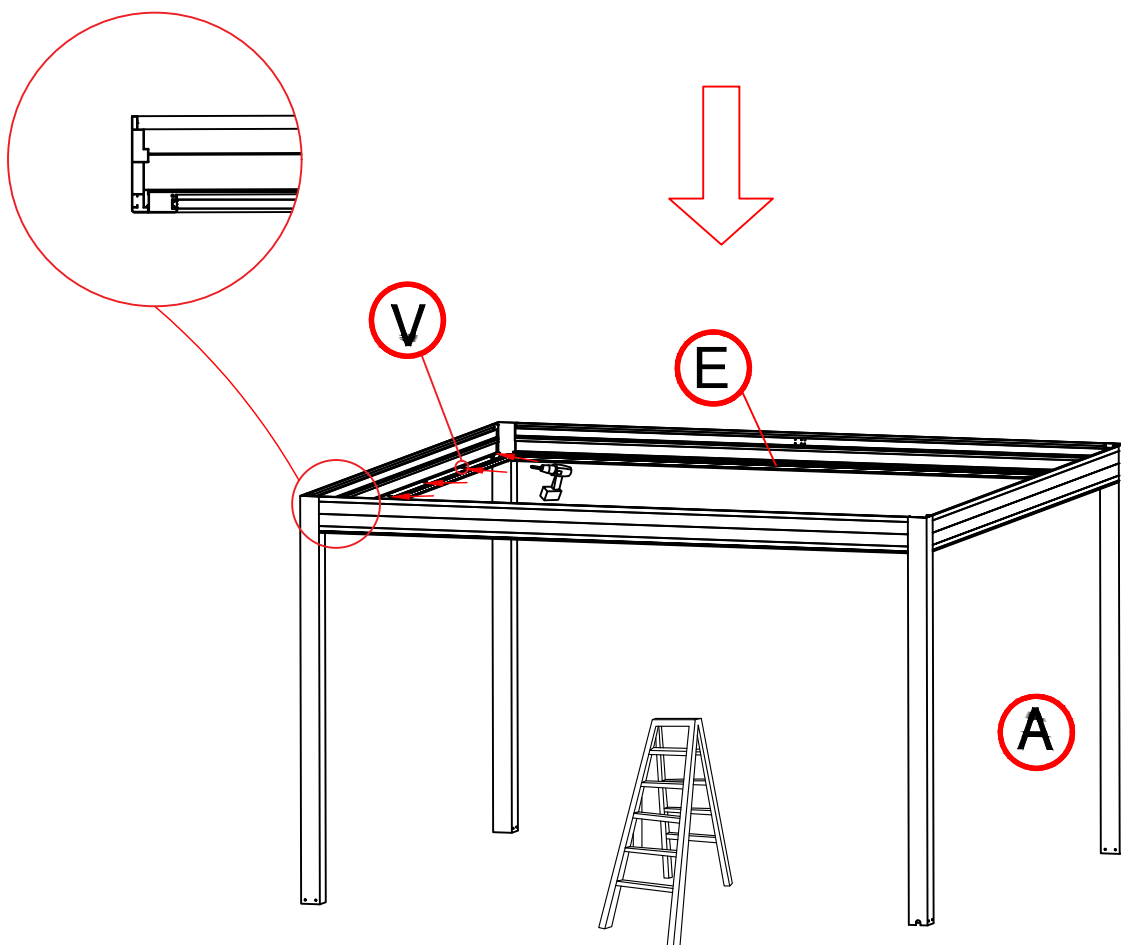 
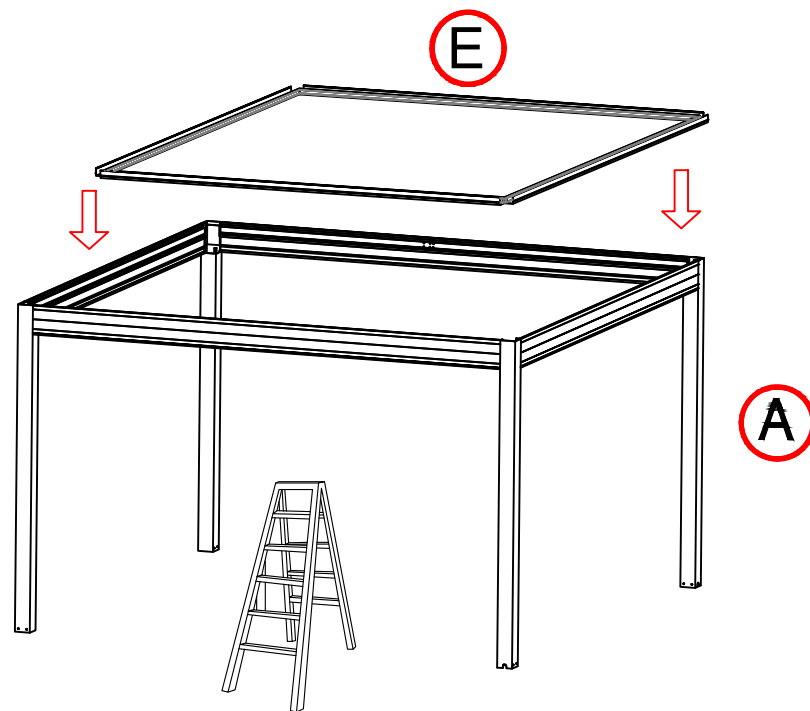 


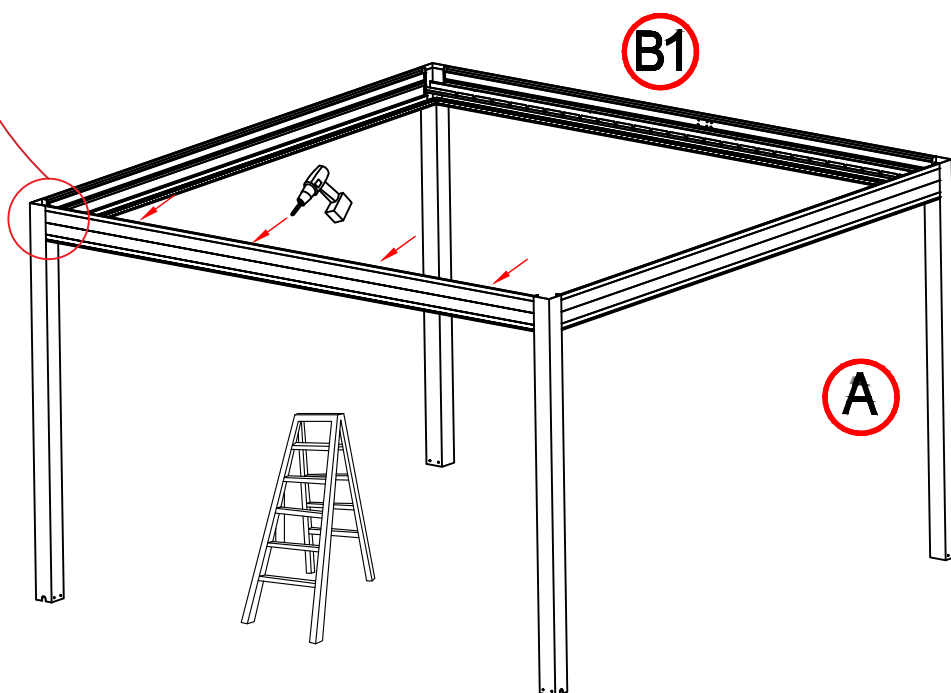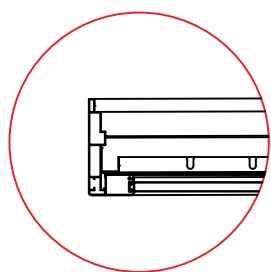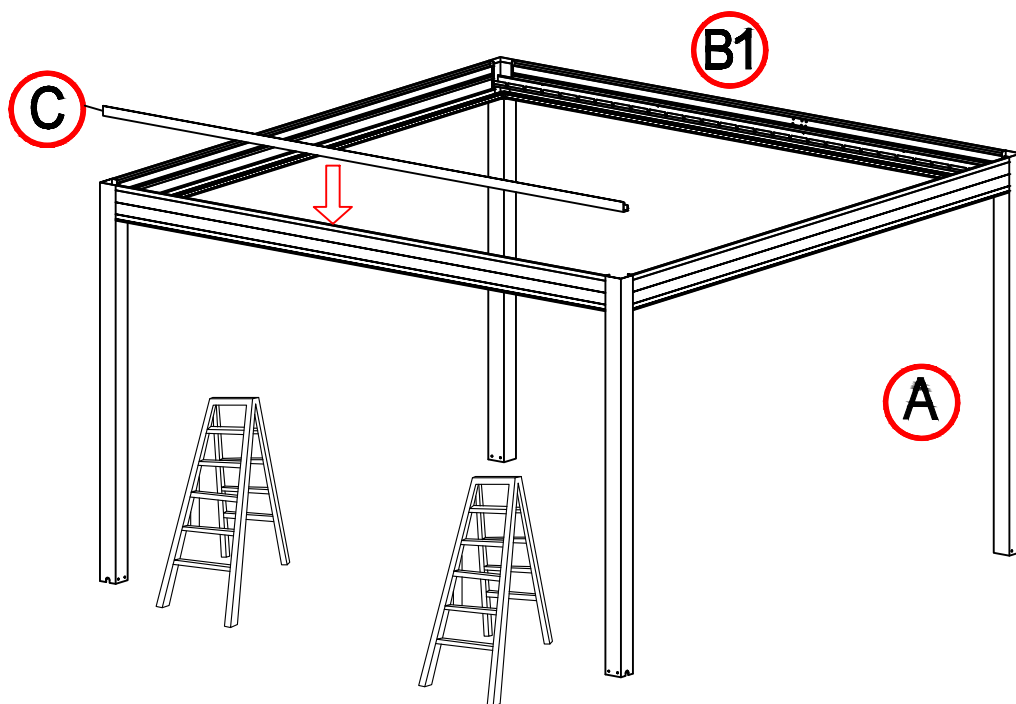 


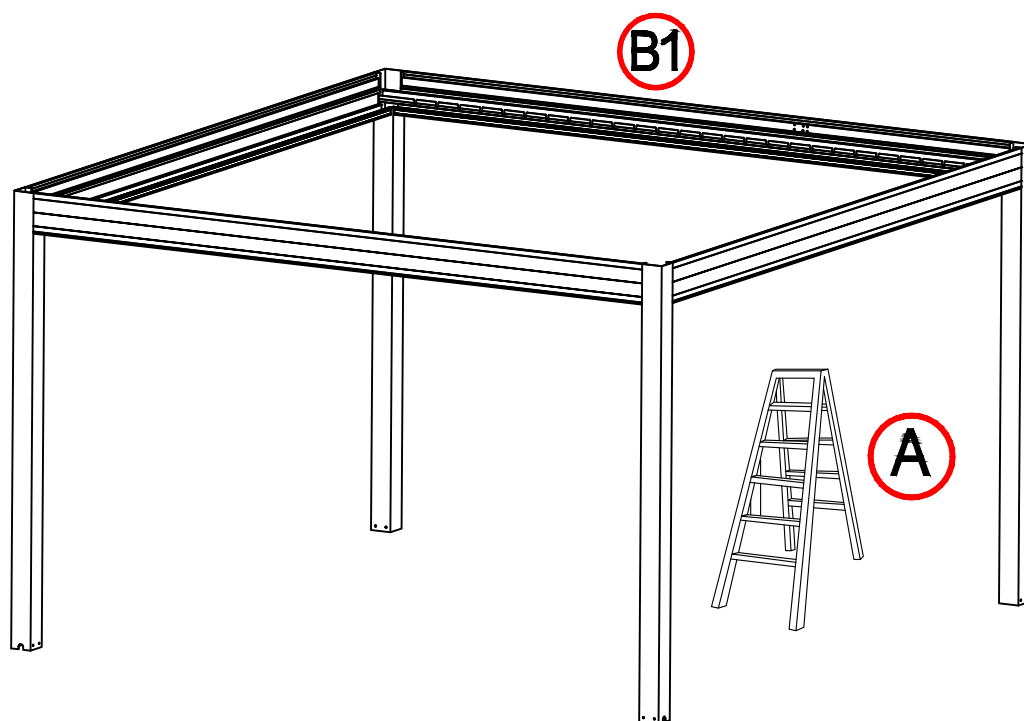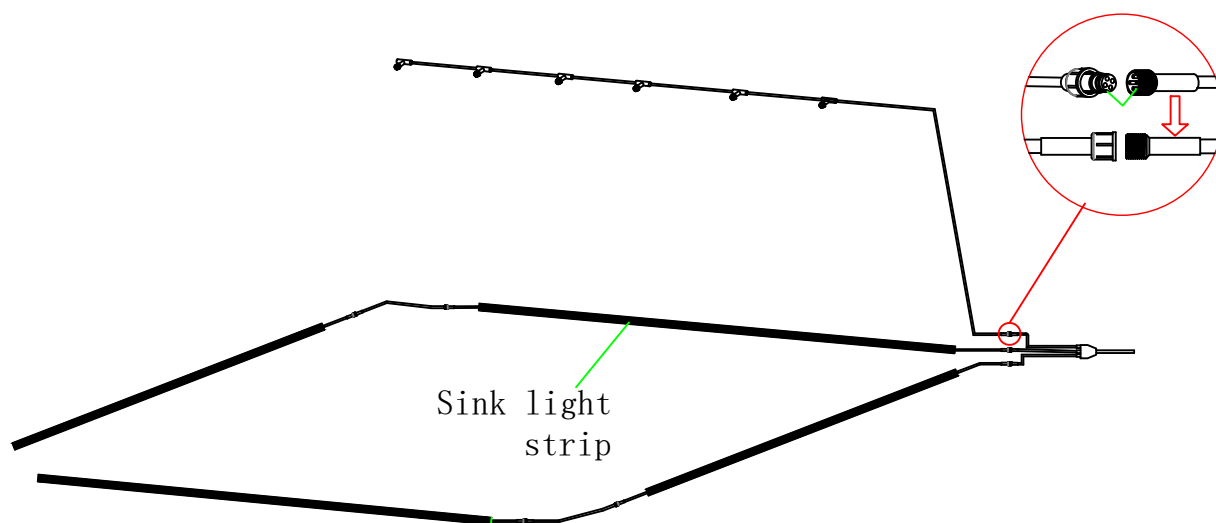

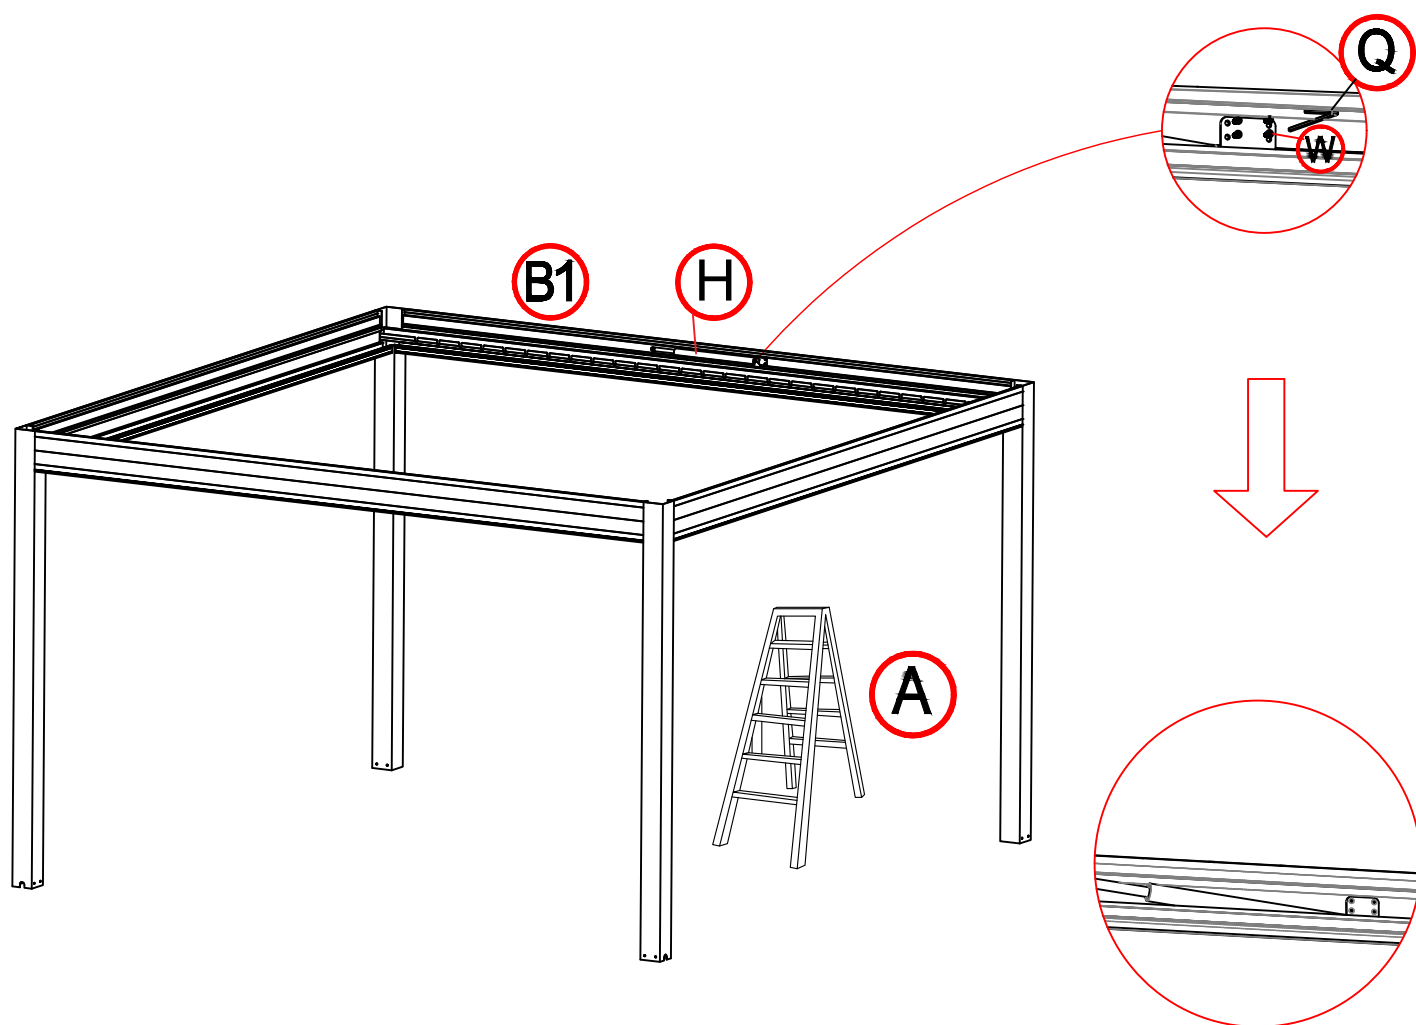

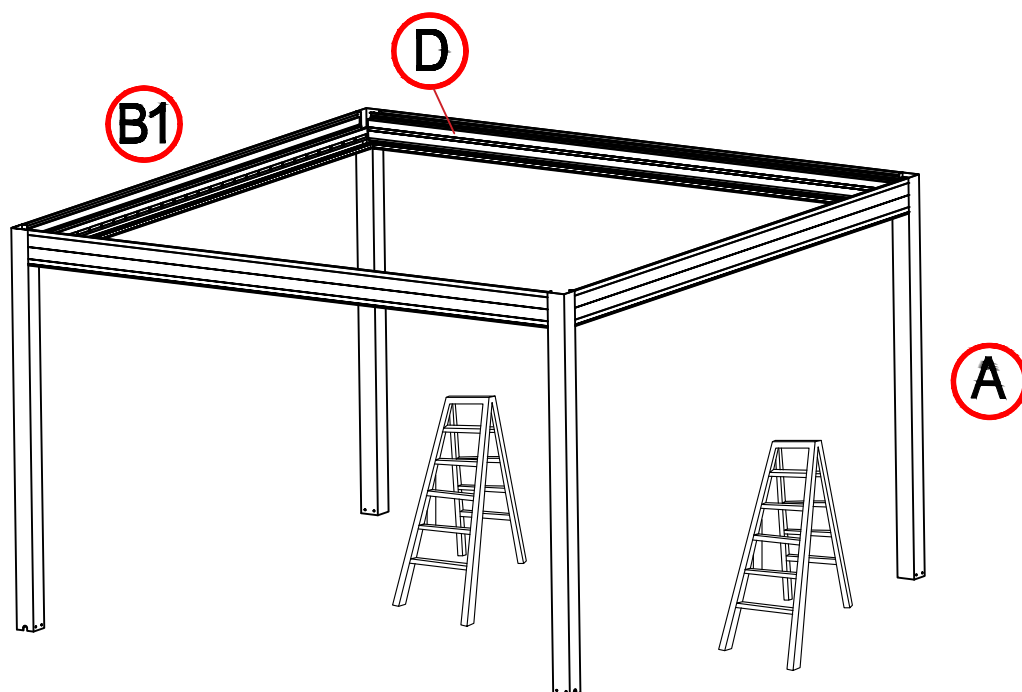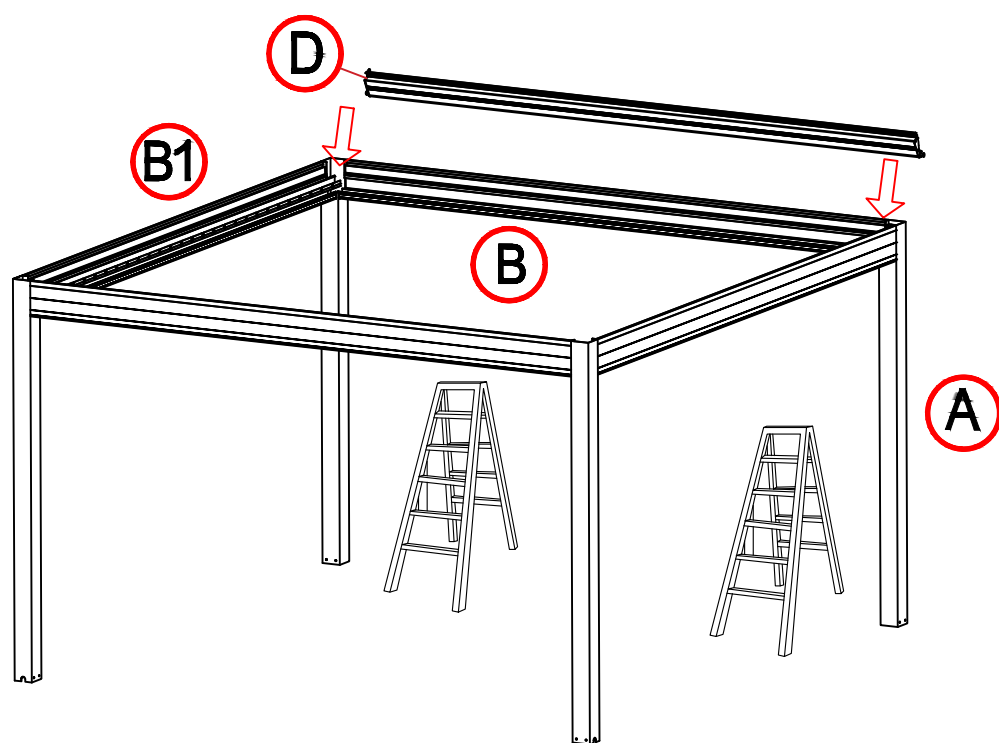

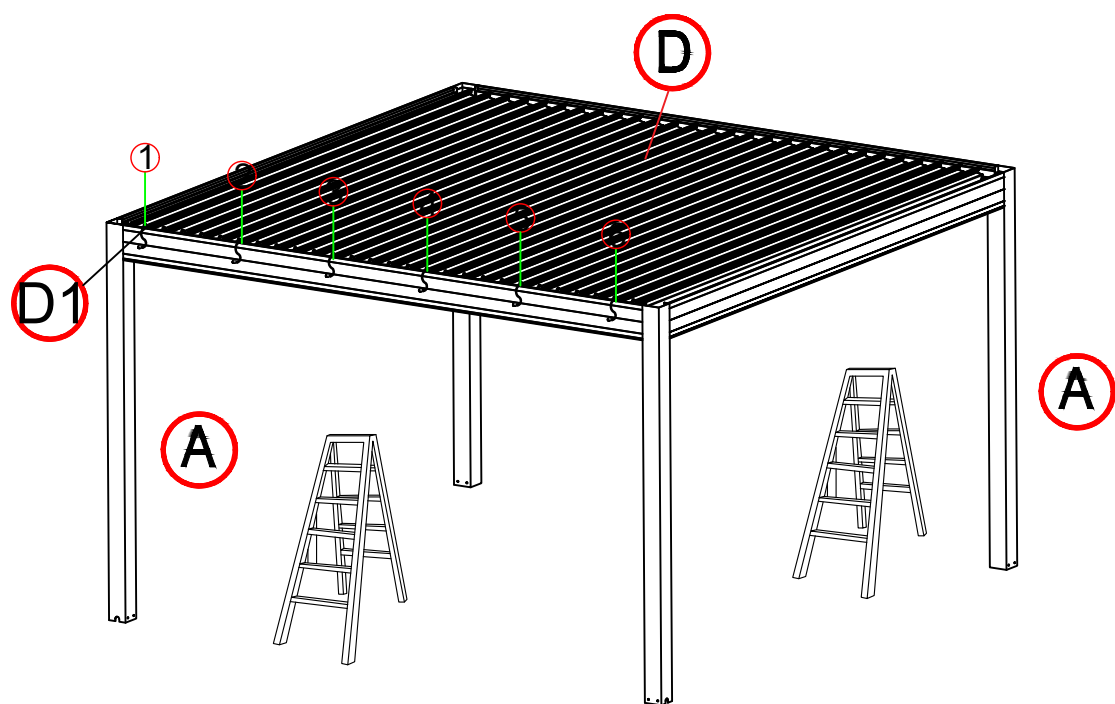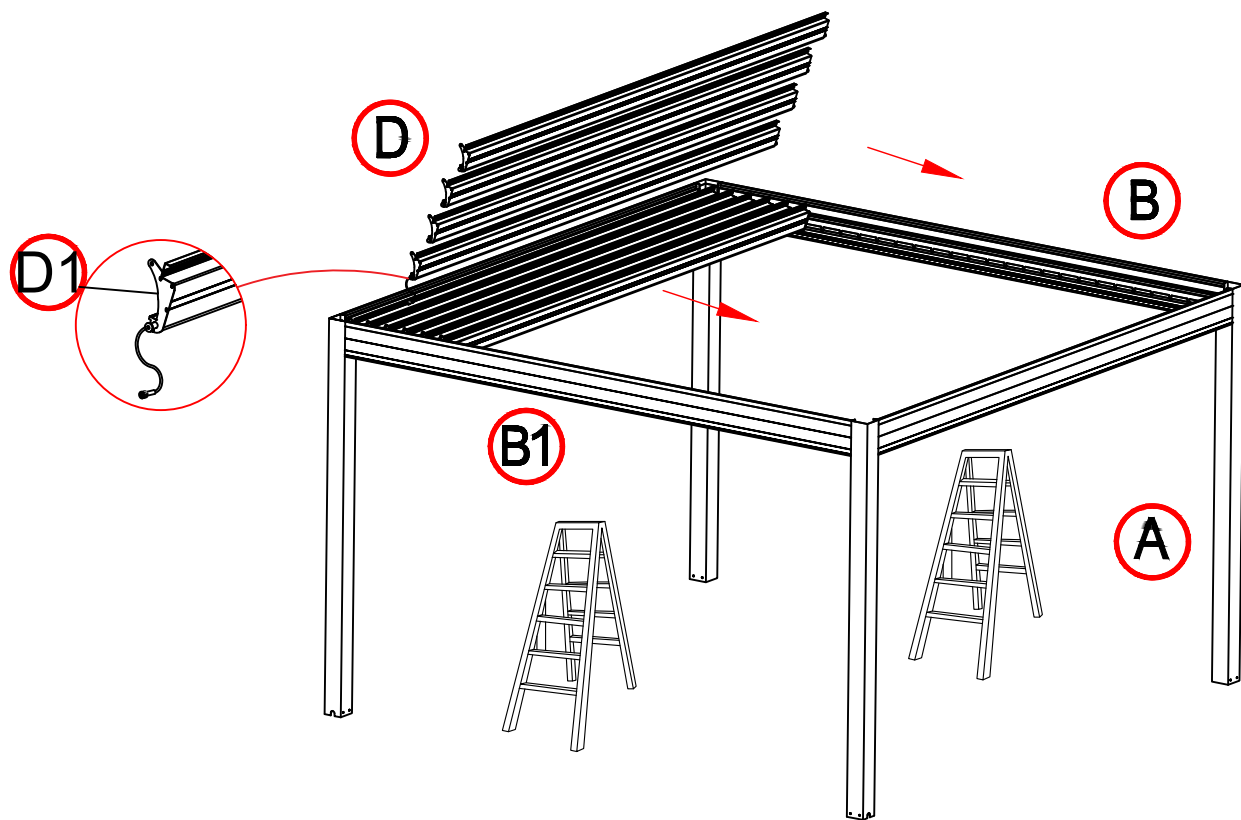

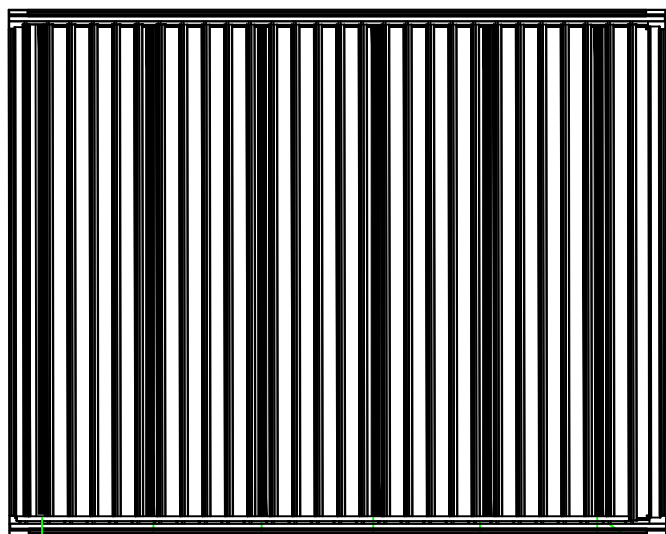

Cablare banda
luminoase pentru lama

6 5 4 3 2 1

Pozitie banda luminoasa

